ENERGY SISTEM

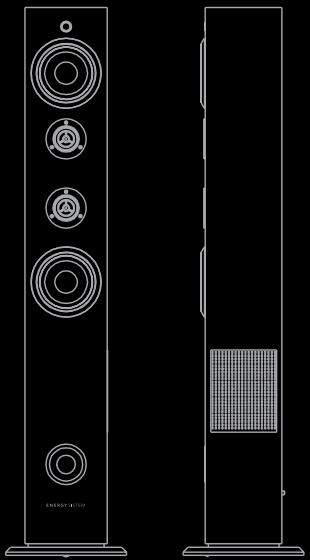

TOWER SYSTEM

ENERGY TS5 2.1 Bluetooth

Manual de usuario / User manual
Manuel de l'utilisateur / Manual do Utilizador

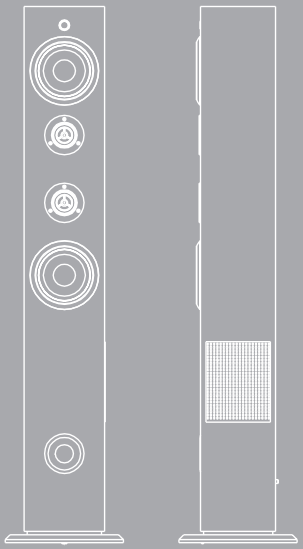

User Manual

INTRODUCTION

Energy Sistem™ thank you for purchasing this Energy Tower System TS5 2.I Bluetooth. We hope you will enjoy it.

We recommend you to read the following user manual in order to take the most advantage from your product, on a safely way and with the best performance.

CARE AND MAINTENANCE

- Do not expose your Energy TS5 to impacts, dust or even high temperatures.
- Do not use corrosive or abrasive cleaning products.
- Keep the device clean and without dust.
- Do not disassemble the device. Any repair should be done by the qualified staff of Energy Sistem Soyntec, S.A.
- Keep your Energy TS5 far form water or humidity, that one can be harmful for both speakers or for the amplifier.
- Make sure that Energy TS5 is off while you are not using it.

TECHNICAL CHARACTERISTICS

- 2.1 sound system with 2x30W output + 30W subwoofer power.
- Bluetooth® v2.1 Class 2.
- Bluetooth® profiles:Support A2DP V1.2; AVRCP V1.
- Frequency: 2.4GHz banda ISM.
- Plays MP3 files from SD/SDHC/MMC cards with capacity up to 32 GB.
- USB memory decoder: plays MP3 files from USB memory drives with capacity up to 32 GB.
- RMS: 60 W.
- Speakes: 4"x2 (main units) + 1,5''x 2 (twitters) + 5" (Subwoofer).
- Frequency response: 20-20K Hz.
- Wooden cabinet speakers.
- Backlit display.
- Band width (FM): 88-108MHz.
- 3.5mm line-in input.
- Power supply: 110-220 V / 50-60 Hz.

PRODUCT CONTENT

- Energy Tower System TS5 2.1 Bluetooth.
- Audio Cable: 3.5 mm.
- Remote Control.

TOP VIEW

1. USB Port.
2. SD / MMC cards port.
3. Line-in input.
4. Display.
5. ON/OFF - SOURCE.
6. Volume -.
7. Volume +.
8. Play / pause / Automatic Search / Preset.
9. Backward.
10. Forward.

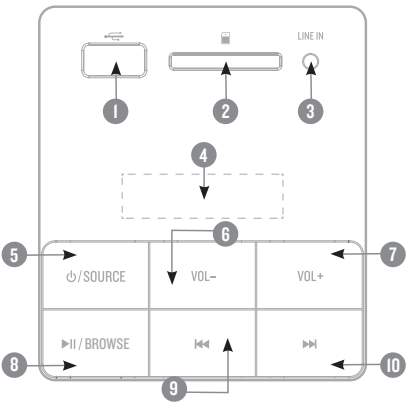

BACK VIEW

11. ON / OFF Switch.
12. Treble EQ.
13. Bass EQ.

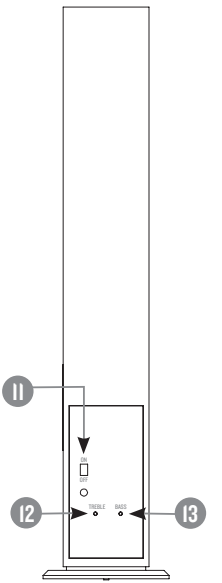

GENERAL FUNCTIONS

Energy Tower System TS5 2.1 Bluetooth is an integrated music player with Bluetooth® technology. You can play your songs through USB / SD memories as well, you can enjoy the FM radio and the Line-in inputs to connect your MP3 player, mobile phone and other audio devices.

In order to select different functions, press SOURCE (5). This will help you to select between the available functions of the connecting devices. The correct switching sequence is: Bluetooth®, "line-in", Radio FM, USB and SD/ MMC.

DISPLAY

Energy TS5 has a hidden display on the top of device.

When device is turned on you can see the Energy Sistem™ logo at the top of the panel. Also, you can see the display area with the actual mode or other information.

BLUETOOTH® FUNCTION

When you start the Energy TS5 you can see "Hi" in the screen. If there isn't any connection (USB/SD/Line-in) then you'll see "no line" text in the screen. Press the SOURCE mode until the Bluetooth® mode ("blue" text in the display). After that moment you can pair it with your Bluetooth® audio device (tablet, smartphone, PC, MAC, etc).

You can view the Energy TS5 as "Energy TS5" in your Bluetooth® device. Then select and pair it. Maybe you need a pairing code to pair with the Bluetooth® audio device. In this case you can use "0000".

When the pairing is done you can start to play your favourite songs without cables.

If you want to change your paired Bluetooth® device, turn off the Bluetooth® function from your Bluetooth® audio device. Then you can search and pair with other Bluetooth® audio device.

The Energy TS5 is provided with the Bluetooth profiles A2DP (Advanced Audio Distribution Profile) that lets you listen to stereo music and the AVRCP (Audio Video Remote Control Profile) by which you can control the music from the top panel or from Remote Control.

FM RADIO FUNCTION

Before using radio function, firstly you have to search the available radio channels and will save them for visualising them later. It is not necessary to repeat this search unless change of location of modification of the radio stations' signal.

To search radio channel, press and keep pressing the play/pause button (8) during 3 seconds. This will save all stations founded in the internal memory of the device. This process may take a few minutes.

In order to select between different stations, you just have to press the forward button (10) or backward button (9). Stations will appear at the same order as they were saved. If you want to do a manual adjust or searching, just keep pressed the forward button (10) or backward button (9) and find the radio station that you want.

LINE-IN FUNCTION

To use the line-in function, connect the audio cable in the line-in port (3) by one side (you can see "Aux" in the display), and connect the other side to another audio device, like MP3 player, player, mini music system, etc.

In line-in function, the Energy TS5 is in speakers' mode, what you will play on the audio device will be listened in your Energy TS5. Besides, if you

change all adjustments such as the volume or sound EQ on the external player, these changes will be applied to the audio Energy TS5.

MP3 FUNCTION WITH EXTERNAL MEMORIES

In order to play MP3 files, insert an external memory such as a USB stick or a SD/MMC memory card in the corresponding slots; (1) and (2) respectively.

If you switch off the Energy TS5 or remove the external memory of your device, when you insert again the same external memory, the lecture will continue at the same instant that you ended previously.

To go forward another track, use next (10) and back (9) buttons. This will go directly to next or previous track.

REMOTE CONTROL

With the Remote Control you can control all possibilities that Energy TS5 offers you:

- Turn ON/OFF.
- Select your mode (USB, SD, Line-in, Radio FM, Bluetooth®) through the SOURCE button.
- "Mute" function for all modes.
- Loudness control, Play and Pause, forward and backward songs or FM channels (in all modes).
- Equalization presets for USB and SD modes.
    - EQ 0: Normal
    - EQ 1: Pop
    - EQ 2: Rock
    - EQ 3: Jazz
    - EQ 4: Classic

- Manage your folders in the USB and SD memories with browse button.
- Repeat and Random modes for the USB and SD memories with RPT button.
- Numeric buttons to select your song number in USB/SD mode or to select your favourite FM channel.

PLAYBACK ORDER

The folders included in the memories are read in writing chronological order and all songs contained in these folders are read in alphabetical order.

For example: if after copying two folders of music called 'A' and 'B', we can copy first folder 'B' and later folder 'A', so the first played song will be first song in alphabetical order of 'B' folder.

Here you have a diagram of the reading order:

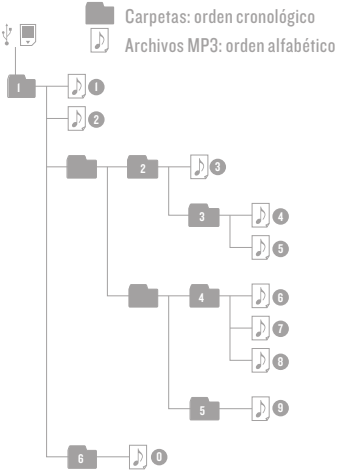

WARRANTY

Energy Sistem Soyntec SA is liable for any lack of conformity which exists at the time the goods were purchased during a period of 36 months. Batteries are excluded from the 36-month warranty, having a warranty period of 12 months.

This warranty covers any defects in workmanship or materials. This warranty doesn't cover any failure of the product due to accidents, misuse or alteration made by an unauthorized person.

The special 36-months warranty is valid for the European Union. For other countries, please refer to your specific legislation or your local distributor.

WARRANTY PROCEDURE

1. Visit the Support section at http://support.energysistem.com http://support.soyntec.com and select your product to view the FAQ (Frequently Asked Questions), user manuals, drivers and updates available, as the possibility to submit a query to the Technical Service or consult the warranty. You can check the availability of the user manual in your language at http://www.energysistem.com/en-en/support/manuals

2. Alternatively, you may prefer to contact the distributor from which you purchased the product, presenting the purchase receipt or invoice.

Important: This warranty doesn't cover any damage or loss to any data stored in the product memory, therefore Energy Sistem's Technical Service will not assume any loss of the above mentioned information. Accordingly, it is recommended to remove any data or personal information from its internal memory before you send the product or to send it only with the original factory default values.

Specifications are subject to change without notice.

Trademarks. All companies, brands and product names are trademarks or registered trademarks of their respective companies.

© 2014 by Energy Sistem Soyntec S.A. All rights reserved.

CE

DECLARATION OF CONFORMITY

Manufacturer Name: Energy Sistem Soyntec S.A.

15/10/2013

Address: Pol. Ind. Finestrat, C/.Calpe, 1 - 03509, Finestrat, Alicante (Spain)

Tel: 902 388 388

Fax: 902 119 034

NIF: A53107488

We declare under our own exclusive responsibility that the product:

Energy Sistem™ Energy Tower System TS5 2.1 Bluetooth.

Manufacturing country: China

Is in compliance with the essential norms and standards of the Directive 1999/5/EC of the European Parliament and of the Council of March 09th 1999.